

FIG. 1

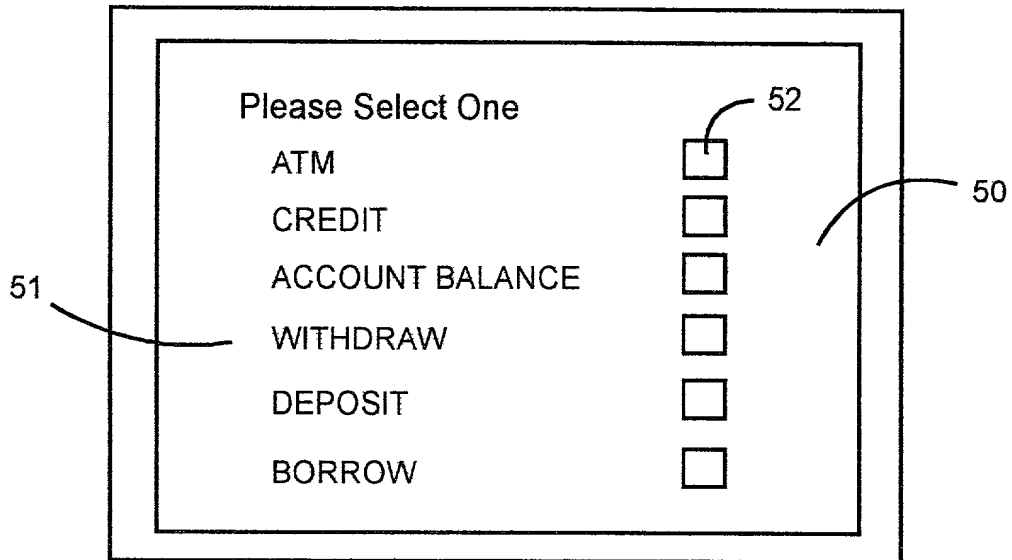


FIG. 2

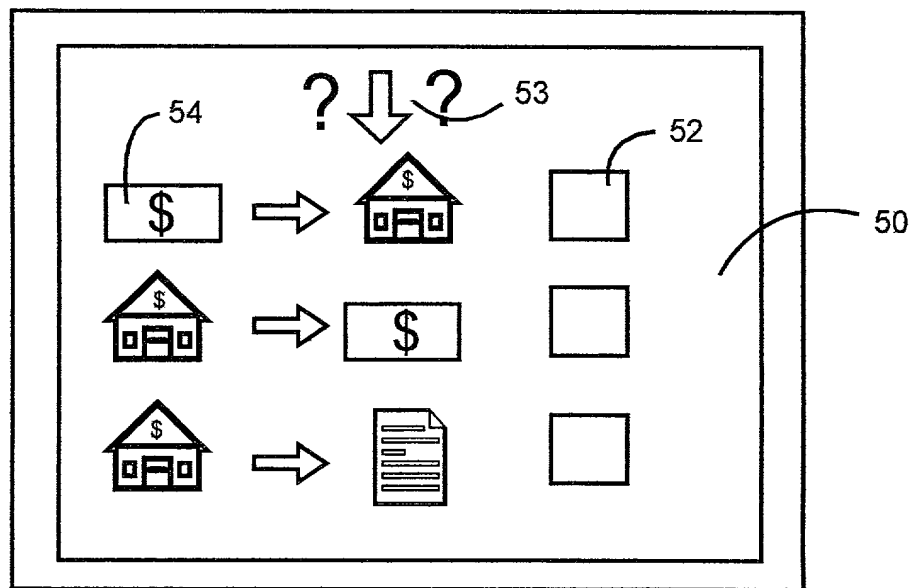


FIG. 3

A rectangular menu screen with a title bar at the top. The title bar contains the text "SELECT ONE". Below the title bar, there are three options, each with a corresponding checkbox to its right. The first option is "ATM" with a checkbox labeled 57. The second option is "CREDIT" with an empty checkbox. The third option is "NEXT" followed by a downward arrow and an empty checkbox. A label 55 points to the "ATM" text, and a label 50 points to the right side of the menu frame.

55 SELECT ONE 57 ☐ ☐ 50

CREDIT

NEXT ↓ ☐

FIG. 4

A rectangular menu screen with three options, each with a corresponding checkbox to its right. The first option is "ACCT. BAL." with a checkbox labeled 57. The second option is "WITHDRAW" with an empty checkbox. The third option is "NEXT" followed by a downward arrow and an empty checkbox. A label 56 points to the left side of the menu frame.

56 ACCT. BAL. 57 ☐ ☐

WITHDRAW

NEXT ↓ ☐

FIG. 5

